



# User Manual & Spare parts catalogue for the TP 250 wood chipper in the park series



## 1 Introduction

Congratulations on your new TP wood chipper.

Linddana produces TP wood chippers of the finest quality by using the most modern production technologies, i.a. laser cutting, CNC technology and robot technology in bright and open production facilities.

For safety reasons and in order to get maximum pleasure from the wood cutter, it is important to read these instructions before use.

The user manual explains about safety, use and maintenance so that the work with the wood chipper will be safe and profitable.

This manual has been translated from Danish.

Linddana A/S



Jørgen Due Jensen, Managing director

Your distributor is always available with spare parts, advice and guidance.



Distributor stamp

## 2 EU declaration of conformity.

**Manufacturer:**

LINDDANA A/S, Ølholm Bygade 70, Ølholm, 7160 Tørring, Denmark  
hereby declares that

**Wood chipper:**

is in concordance with the provisions of the Machine Directive (Directive 06/42/EC) and with the national legislation which translates this directive;

is in concordance with the following other EC Directives:  
2000/14/EC

Furthermore it is stated that  
EN 13525 (harmonised standard), has been used.

Title: Managing director  
Name: Jørgen Due Jensen

A handwritten signature in black ink, appearing to read 'Jørgen Due Jensen', is written over a light blue grid background.

Ølholm, 12 June 2014

### 3 Table of content

<b>1</b>	<b>Introduction .....</b>	<b>2</b>
<b>2</b>	<b>EU declaration of conformity. ....</b>	<b>3</b>
<b>3</b>	<b>Table of content.....</b>	<b>4</b>
<b>4</b>	<b>Use .....</b>	<b>5</b>
<b>5</b>	<b>Mounting instructions.....</b>	<b>6</b>
5.1	Before use .....	6
5.2	Mounting instruction .....	8
<b>6</b>	<b>Safety instructions .....</b>	<b>9</b>
6.1	Safety regulations .....	9
6.2	Pictograms used .....	11
6.3	Noise level .....	13
6.4	Environmental instructions .....	13
<b>7</b>	<b>Operation of the machine .....</b>	<b>14</b>
7.1	Table 1 Regulating the number of revolutions for the retract rollers .....	15
<b>8</b>	<b>Maintenance .....</b>	<b>16</b>
8.1	Maintenance schedule.....	16
8.2	Lubrication and oil .....	17
8.3	Maintenance of the retract rollers .....	18
8.4	Changing worn parts.....	19
8.5	Grinding of knives .....	25
<b>9</b>	<b>Special instruction for TP 250 MOBILE TURNTABLE .....</b>	<b>26</b>
<b>10</b>	<b>Hydraulics diagram, TP 250 without revolution guard .....</b>	<b>29</b>
<b>11</b>	<b>Hydraulics diagram TP 250 with revolution guard.....</b>	<b>29</b>
<b>12</b>	<b>Instruction for revolution guard TP PILOT 01 .....</b>	<b>30</b>
12.1	Overall operation .....	30
12.2	Programming .....	32
12.3	Mounting.....	36
12.4	Technical data.....	37
<b>13</b>	<b>Troubleshooting for wood chipper TP 250.....</b>	<b>38</b>
<b>14</b>	<b>Warranty obligation for wood chipper .....</b>	<b>39</b>
<b>15</b>	<b>Technical data wood chipper .....</b>	<b>41</b>
<b>16</b>	<b>Accessories .....</b>	<b>43</b>
<b>17</b>	<b>Spare parts catalogue .....</b>	<b>43</b>

## 4 Use

The TP 250 wood chipper is designed for **stationary** wood chipping in the form of braches etc.

The machine must **not** be used for materials containing stone, metal or other foreign bodies. These foreign bodies can in the best case dull the knives and in the worst case break the machine. Knives and anvil can break when stone or metal comes in between them.

The machine must **not** be used for wood chipping of wood containing nails, screws, arming etc.

When feeding branches you must stand next to the feeding hopper (see fig. 1).

The branches can be thrown around when the retract rollers get a hold of them.

Logs must be fed into the machine from the back (see fig. 2).



**Figure 1 Feeding branches**



**Figure 2 Feeding logs**

Remember to keep the **knives** and **anvil** sharp, it makes feeding easier and gives a better quality chips, and besides it lowers the use of fuel considerably.

The machine must be inspected daily, meaning the rotor housing must be opened and the rotor, knives, anvil etc. must be inspected. By doing this you prevent unexpected stops and prolong the life of the machine.

The tractor or trailer upon which the machine is mounted must always have the brakes activated during work.

The machine must **not**:


- Be used for other materials than wood
- Be used to push trees, stubs etc.

There must **not** be equipment like forest chains, axes, chain saws etc. in the feeding hopper.

## 5 Mounting instructions

### 5.1 Before use


The machine is equipped with a lifting point which is to be used when lifting the machine with a crane or any other hoisting device (ground assistance) (see Fig. 3). The machine can also be lifted with a fork lift truck. This is done by using the holes made for this purpose on both sides of the foot (see fig. 4). Make sure that the forks of the truck are put all the way through otherwise the machine can tip over. The TP 250 MOBILE TURNTABLE is mainly transported on the trailer wheels, but it can also be lifted with a fork lift truck under the trailer bearers (see fig 5).

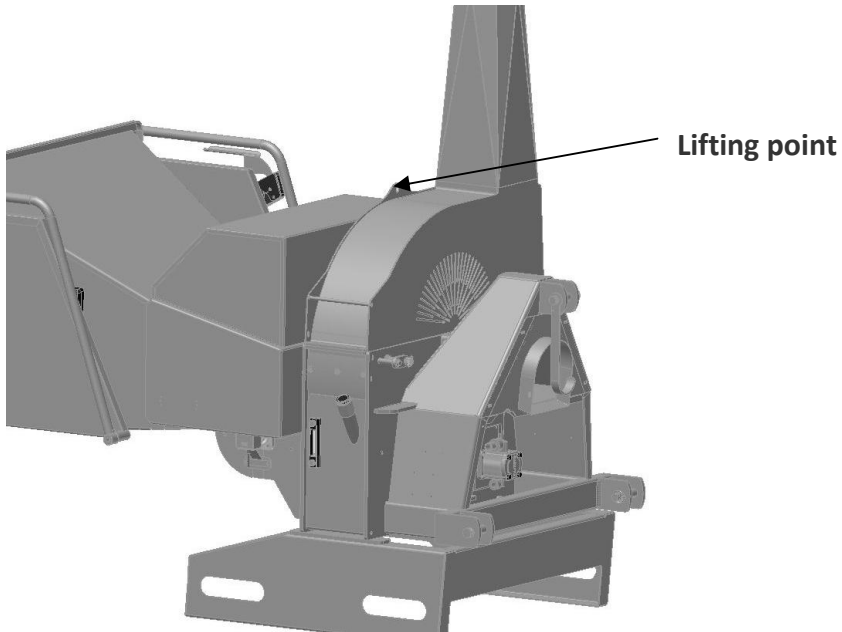

**Figure 3 Lifting point on the machine**




**Figure 4 Lifting with a fork lift truck**

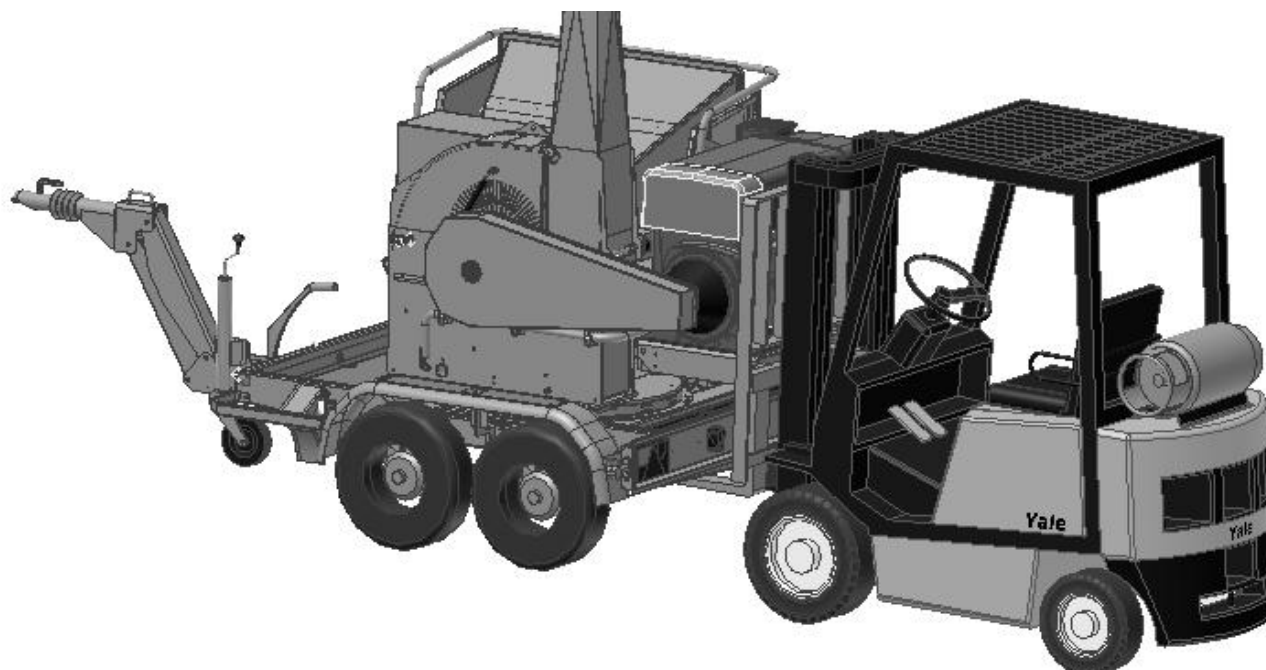

**Figure 5 Lifting with a fork lift truck**

Store the manuals for the PTO member with this manual in the manual box on the machine.

Before operation you must check that the wood chipper cleared of foreign bodies. The machine **must** be uncoupled from the tractor's PTO, and for the MOBILE models, the key **must** be removed from the ignition before opening for the rotor. Check that the rotor is at a complete standstill. Turn the ejector tube so that it faces the opposite direction of the rotor housing (see fig. 6). Loosen the bolts that hold the upper and lower rotor housing together. Lift the top part of the rotor housing up until the ejector tube rests on its own. Turn the rotor a few times by hand. Remove any foreign bodies.

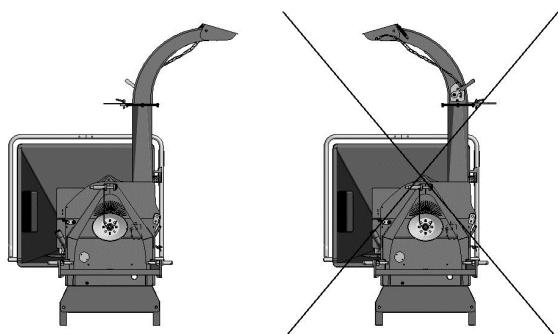

**Figure 6**

**Position of ejector tube  
when opening rotor**

Check that the gap between the knives and the anvil is correct = **0,7 mm**. The knives have a fixed **knife position = 13 mm**. Check that the knives are not rubbing on the anvils.

**Lift the top part of the rotor housing back in place and tighten the bolts.**

**Check that all bolts, nuts and screws are tightened properly.**

**Remember to lubricate all the lubrication points (see maintenance schedule, page 16).**

Old hydraulics and motor oil and used oil filters and air filters must be handed in at an approved receiving station.

## 5.2 Mounting instruction

The machine is designed to be mounted on the tractor's three-point-suspension or trailer mounted with its own engine.

Machines for mounting on the tractor's three-point-suspension is delivered with a PTO axle with either 1 3/8" - 6 splines or 1 3/8" - 21 splines.

At 1000 rpm, certain types of tractors a PTO axle with 1 3/8" - 21 splines must be used.

The PTO axle **must** be mounted with free running on the machine side.

Linddana uses Walterscheid 2400 with free running which comes with the machine.

The length of the PTO axle has to be adapted to the tractor following instructions from the supplier of the PTO axle. See the attached manual for the PTO axle.

The machine must stand on a plane, horizontal surface during use and the tractor mounted machines must be attached to the tractor's three-point-suspension (see fig. 7). The tractor's brakes must be properly activated. Trailer mounted machines must also have their brakes activated (see fig. 8).

When starting the machine: Engagement must be done with the motor running at idle speed or at as few revolutions as possible in order to avoid overloading of the PTO axle, gear box, tractor and wood chipper.

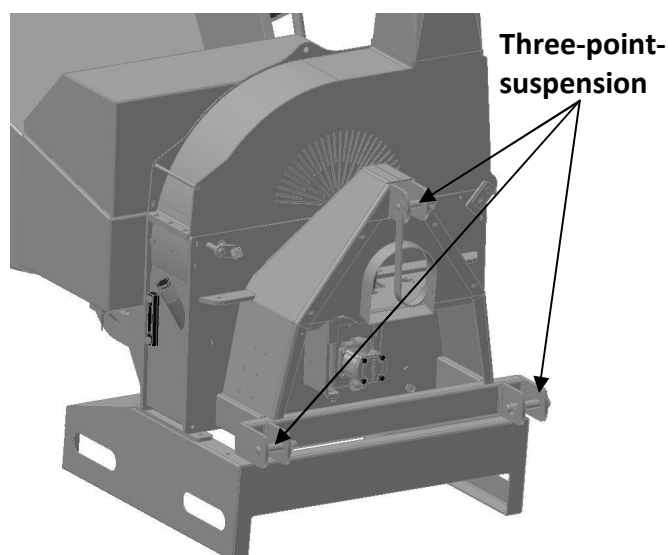


Figure 7 TP 250 PTO three-point-suspension

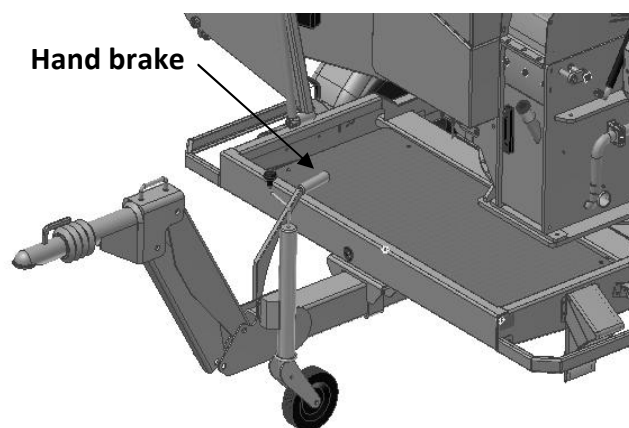


Figure 8 TP 250 MOBILE hand brake




## 6 Safety instructions

### 6.1 Safety regulations

- Use hearing protectors, safety goggles or a similar eye protection, close fitting safety clothing and safety shoes.
- When working near roads it can be prudent to wear a vest which reflects the light to be more visible to the other road-users. The displaying of signs must be in accordance with the Road Traffic Act.
- Minimum age for users of the machine is 18, for training and under surveillance from an adult the age is 16.
- During operation, all body parts must be kept away from the feeding hopper and any moveable parts of the machine.
- Always stand next to the feeding hopper during feeding of the machine. Always observe the terrain conditions around the machine. It can be dangerous to fall near the machine!
- Before starting the machine check that the safety devices are working properly. Especially the stop and return functions on the operation bow.
- The machine **must** not be started without the ejector tube mounted to the machine.
- **Never** use the machine in closed or poorly ventilated spaces, because of the danger of carbon monoxide poisoning.
- The top part of the machine as well as all other shielding must **not** be opened/removed before the rotor disc is completely immovable and the tractor's motor is stopped.
- **Always** stop the machine and the tractor during inspections, service or repairs. The machine **must** be uncoupled from the tractor's PTO.
- Tractor mounted machines have to be on the ground before service or repairs are done.
- Always remove the keys from the machine and/or the tractor before leaving it.
- After maintenance and repairs, the machine must not be started before all bolts are tightened and all safety devices are mounted.
- Three-point mounted machines **must** be coupled to the tractor's three-point- suspension before use.
- The maximum rpm for the machine (1000 rpm) must **not** be superseded.
- The transmission axle's tube shielding and covering must always be intact. Safety chains on the transmission axle have to be properly mounted.
- The length of the PTO axle has to be adapted to the tractor according to the recommendations from the supplier of the PTO axle.
- The ejector tube must **not** point towards people or areas where there are people. There is a safety distance of 20 m. in the direction where the chips are thrown.
- **AT DANGER: PUT THE OPERATION BOW IN NEUTRAL (See fig. 10)**

- During operation the machine's height may not supersede 600 mm over the terrain (see fig. 9). If this height is not maintained the operation/safety handle will not work as it should, and that may lead to risks of severe personal injury due to retraction.

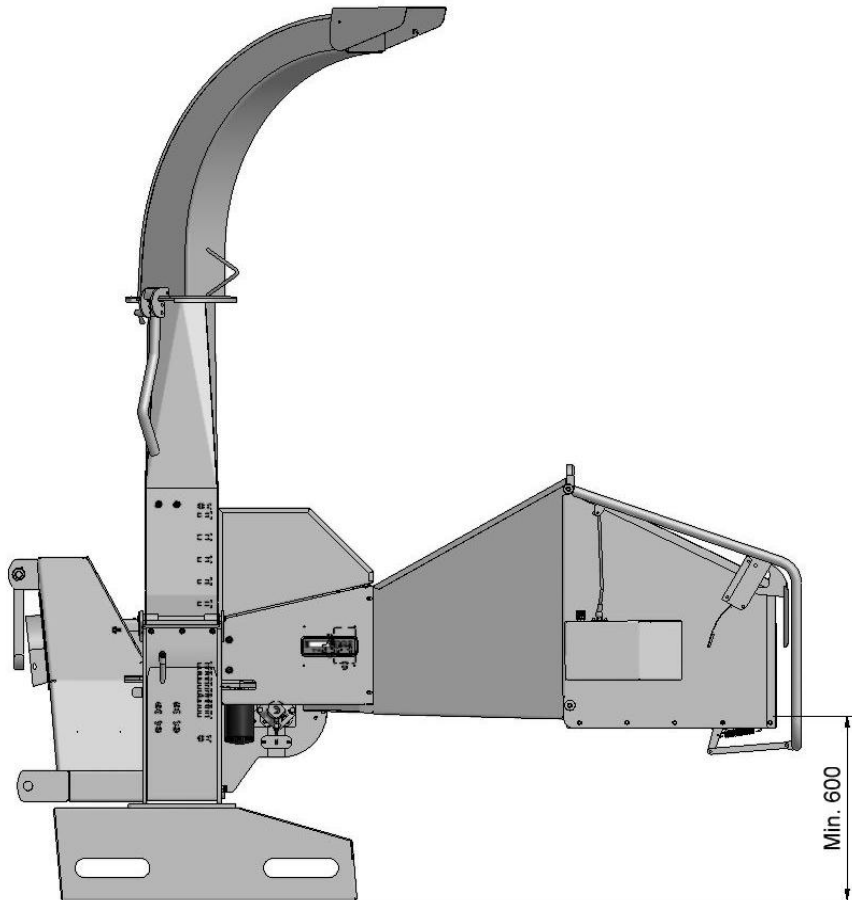

**Figure 9 Maximum height over the terrain**



- During transport or when the machine is dismantled, the PTO axle has to be placed in the machine's carrier bow.
- In case of transport on roads the ejector tube is turned so it is placed appropriately within the width of the machine and then it is fixed securely.
- During transport on public roads, the provisions of the authorities must be respected.
- During cleaning of the hopper, **THE RETRACT ROLLERS MUST BE STOPPED.**
- For cleaning a broom or similar **must** be used. Never touch the inside of the hopper when the machine is running.

**SPECIAL: TP 250 PTO K**


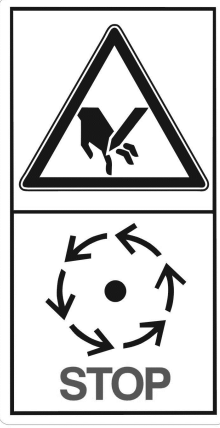

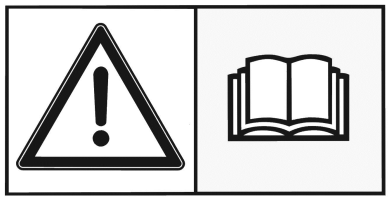


- The machine must **not** be fed by hand since it has been designed for feeding by a crane.
- There is a security zone of 20 m around the tractor and the wood chipper. During operation no one except the driver of the tractor is allowed in this area.
- If people should come inside the security zone by accident, the emergency stop which stops all movement by the crane and feeding into the wood chipper must be pressed **immediately**. The emergency stop should **always** be activated when the driver leaves the driver's cab.
- **AT DANGER: AKTIVATE THE EMERGENCY STOP IN THE TRACTOR**

## 6.2 Pictograms used

## TP 250 PTO

		
<p>Warning: Objects thrown! Safety distance 20m!</p>	<p>Warning: Rotating knives! Wait for rotor to stop!</p>	<p>Warning: Rotating rollers!</p>
		
<p>Warning: Danger of retraction! Do not touch the hopper!</p>	<p>Warning: Danger of retraction! Do not step on the hopper!</p>	
	<p>P.T.O.: 540 r.p.m. P.T.O.: 1000 r.p.m.</p>	
<p>Functions of the operation bow</p>	<p>Max. Revolutions of the PTO</p>	<p>Read the manual before use!</p>
		
<p>Lifting point for fork lift truck</p>	<p>Hearing protector and eye protection prescribed!</p>	<p>Lifting point for crane!</p>

## TP 250 PTO K

		
<p>Warning: Objects thrown! Safety distance 20m!</p>	<p>Warning: Rotating knives! Wait for rotor to stop!</p>	<p>Warning: Must not be hand fed!</p>
<p>P.T.O.: 540 r.p.m. P.T.O.: 1000 r.p.m.</p>		
<p>Max. Revolutions of the PTO</p>	<p>Read the manual before use!</p>	
		
<p>Lifting point for fork lift truck</p>	<p>Lifting point for crane!</p>	

### 6.3 Noise level

The sound effect level and the sound pressure level from the TP 250 PTO have been measured during use at 1000 rpm on the rotor disc, powered by a tractor.

The sound effect level and the sound pressure level from the TP 250 MOBILE have been measured during use at 930 rpm on the rotor disc, powered by the Hatz 4L41C motor engine.

The measurements have been conducted according to test provisions

Directive 2000/14/EC, 3. July 2000

EN ISO 3744, 1995

ISO 11201, 1995

ISO 4871, 19. March 1997

EN 13525, 17. February 2005

The guaranteed sound effect level which will be given by the manufacturer according to directive 2000/14/EC are as follows:

**TP 250 PTO: 127 dB (A) re.1pW.**

**TP 250 MOBILE: 127 dB (A) re.1pW.**

The machine's sound pressure level at the operator's seat is measured according to ISO 11201 at:

**TP 250 PTO: 110 dB (A)**

**TP 250 MOBILE: 109 dB (A)**

The above mentioned values have the common uncertainty for the method of measuring and the estimated variation in a product line for the type of machine. Detailed information on the measurements and results as well as estimation of uncertainty are found in a thorough report which can be given out on demand.

The sound level is of such a character that hearing protectors are prescribed during use of the machine.

### 6.4 Environmental instructions

When changing hydraulic oil or engine oil, oil and used oil filters and air filters must be handed in at an approved receiving station.

Oil spills must be avoided as much as possible. At oil spills, the spilled oil must be cleaned up and handed in at an approved receiving station.

Worn out parts must be disposed of for recycling.

When the machine is worn out it must be disposed of properly. Hydraulic oil and engine oil must be drained and handed in at an approved receiving station with oil filters and air filters.

The rest of the machine must be disposed of for recycling.

## 7 Operation of the machine

The wood chipper is equipped with two hydraulic rollers, a pressure compensated flow valve, a control valve, an operation bow with a reset handle and a funnel handle (see fig. 10).


The funnel is hinged.

To make it easier to open and close the folding infeed funnel used the funnel handle that pulled out. Funnel handle is pushed back after opening and closing of the funnel.

The operation bow must be in the stop position (0) during start (see fig. 11). After start you release the reset handle and pull the operation bow into the middle position (A) and the rollers will turn. The material is now pulled into the machine.

By pulling the operation bow towards you (B), the flow of oil in the control valve is turned and the rollers reverse, the material is now pushed out of the machine.

When the machine is either stopped (0) or reversed (B), the reset handle will automatically block the operation bow. It is now necessary to release the reset handle before the operation bow can be moved into the middle position (A) and the rollers can pull the material into the machine. This reset handle is a safety measure so you cannot start the rollers by accident so they pull material into the machine.

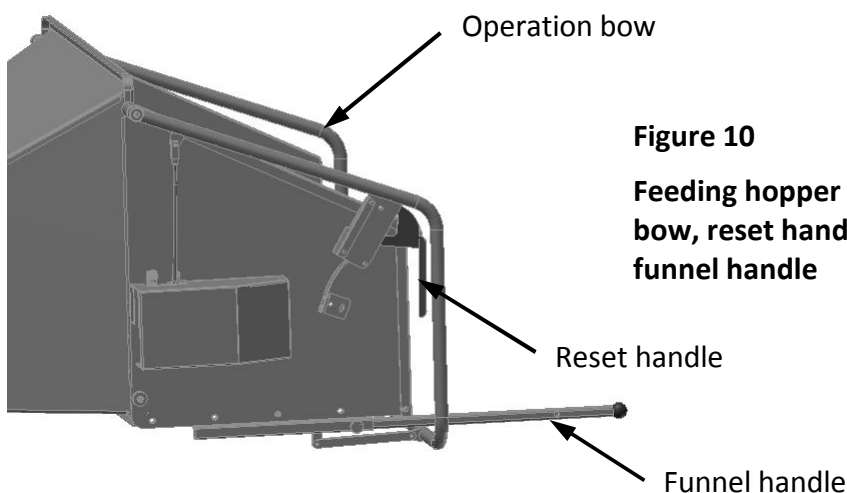


**Figure 10**

**Feeding hopper TP 250 with operation bow, reset handle and extracted funnel handle**

**Figure 11**

**Direction to the operation bow**

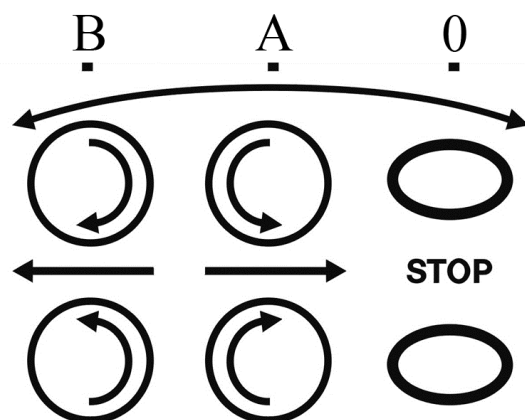

By turning the adjusting screw on the flow valve you can find the correct rpm. Never go too fast with the rollers because the wood will work like a brake if the pressure on the rotor is too big with the ensuing increase in use of fuel. Branches can get wrapped around the rollers if the rpm is too high.

In the table below (table 1) are stated the recommended rpm on the retract rollers at a desired chip length. The speeds vary with the number of revolutions on the PTO axle. The chip length can be regulated on the flow-regulation valve on the wood chipper for smaller chip lengths than indicated in the table.

7.1 Table 1 Regulating the number of revolutions for the retract rollers

Chip length Model	Rotor Rpm	4 mm	6 mm	8 mm	10 mm	13 mm
TP250 PTO	540	9	14	19	24	31
TP250 PTO	1000	17	26	35	44	56
TP250 MOBILE TURNTABLE	900	16	24	31	39	51

## 8 Maintenance

During all maintenance and repairs the machine and the drive must be shut off. Tractor mounted machines have to be placed on an even surface and be uncoupled from the tractor's PTO.

### 8.1 Maintenance schedule

Interval=> hours	8 h	50 h	100 h	200 h	1000 h	1.000 m <sup>3</sup>	10.000 m <sup>3</sup>
Lubrication of the PTO axle <sup>1</sup>	X						
Check of knives and anvil	X						
Tightening of all nuts and bolts <sup>2</sup>	(X)	X					
Lubrication of main bearings for rotor disc <sup>3</sup>			X				
Tube connection for PTO axle cleaning/lubrication <sup>4</sup>				X			
Lubrication of roller bearings <sup>5</sup>				X			
Changing of return filter for hydraulic pump <sup>6</sup>		(X)			X		
Change hydraulic oil <sup>7</sup>					X		
Anvil turn/change <sup>8</sup>					X		
Change bow in top rotor housing <sup>9</sup>					X		
Turn/change triangle and square scrapers <sup>10</sup>						X	
Grind flats on retract rollers <sup>11</sup>						X	
Check V-belts <sup>12</sup>		X					
Check ejector wings for wear					X		
Check casing for wear and tear							X

<sup>1</sup> The PTO axle is dismantled and 4 lubrication nipples are lubricated with Uniway Li62 or something of similar quality.

<sup>2</sup> Bolts and nuts are tightened, the first time after 8 hours and then with an interval of 50 hours.

<sup>3</sup> Two lubrication nipples are lubricated with Uniway Li62 or something of similar quality.

<sup>4</sup> The PTO axle is dismantled and the tube connection is pulled apart, cleaned and lubricated.

<sup>5</sup> Two lubrication nipples are lubricated with Uniway Li62 or something of similar quality.

<sup>6</sup> Changed for the first time after 50 hours and then every 1000 hours.

<sup>7</sup> Drain the hydraulic oil and fill with new oil using 25 litres of **Hydraway HVXA 46** or oil that has the equivalent specifications. The interval between changing oil can be extended by using biodegradable hydraulic oil, such as the type **Hydraway SE 46 HP** and taking oil samples on an ongoing basis.

<sup>8</sup> The anvil is turned/changed depending on need.

<sup>9</sup> The bow in the top rotor housing is changed depending on need if it is mounted.

<sup>10</sup> The triangle scraper in the rotor housing is turned/changed. The square scraper on the rotor is turned/changed.

<sup>11</sup> The retract rollers are sharpened.

<sup>12</sup> The tightening of the V-belts is checked.



## 8.2 Lubrication and oil

The Wood Chipper is as standard, factory-filled with hydraulic oil of the type **Hydraway HVXA 46**. When replacing the oil, use the same type of oil or oil with equivalent specifications. Do not mix together different types/brands of oils.

As an accessory, the Wood Chipper can be delivered factory-filled with biodegradable oil of the type saturated ester, **Hydraway SE 46HP**. When replacing the oil, use the same type of oil or oil with equivalent specifications. Do not mix together different types/brands of oils.

Old hydraulic oil and engine oil as well as used oil filters and air filters should be handed in to the local receiving station.


Lubrication nipples are lubricated according to the maintenance schedule with Statoil **Uniway Li62** or a similar product.

The machine is equipped with a hydraulic oil tank which is integrated in the rotor housing. The tank is equipped with a filler neck, an air release valve, a level glass and a return filter.

When changing the hydraulic oil, the filler neck is opened (see fig. 12).

The drain plug is unscrewed. The oil is drained into a canister for proper removal. When the tank is almost empty, the tank is sucked empty with an oil suction device. The drain plug is screwed back and new hydraulic oil is slowly filled in (25 litres for TP 250).

Oil is filled in until the level glass is half filled.

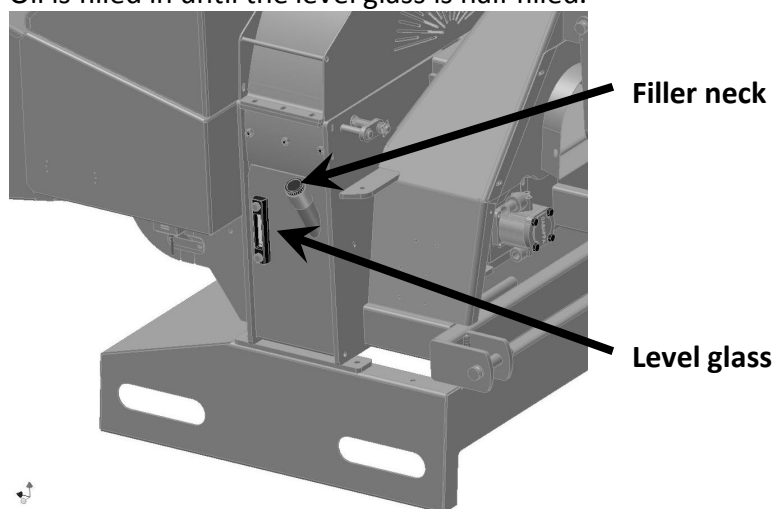

**Figure 12 Filling hydraulic oil**

### 8.3 Maintenance of the retract rollers

The retract rollers pull the material into the rotor disc and the knives.


The plates on the bottom retract roller must be kept sharp in order to keep the retract force.

*This is how it is done:*

Stop the machine and the drive. Uncouple the tractor's PTO. Check that the rotor is at a **complete** standstill. Turn the ejector tube so it faces the opposite direction of the rotor housing (fig. 6). Loosen the bolts which hold the two parts of the rotor housing together and open the rotor housing. With multigrip pliers or something similar, the spring is lifted off the top retract roller. Grab the handle and open the roller housing and push the locking pawl into the lock in the side plate (fig. 13). The roller housing is now secured from falling down. Now the flats on the bottom retract roller can be grounded with an angle grinder.

Turn the rotor carefully with the operation bow in position forward or reverse. By doing this, the retract roller is turned so all the plates can be ground.

Remember that the welding seams are not to be ground away.

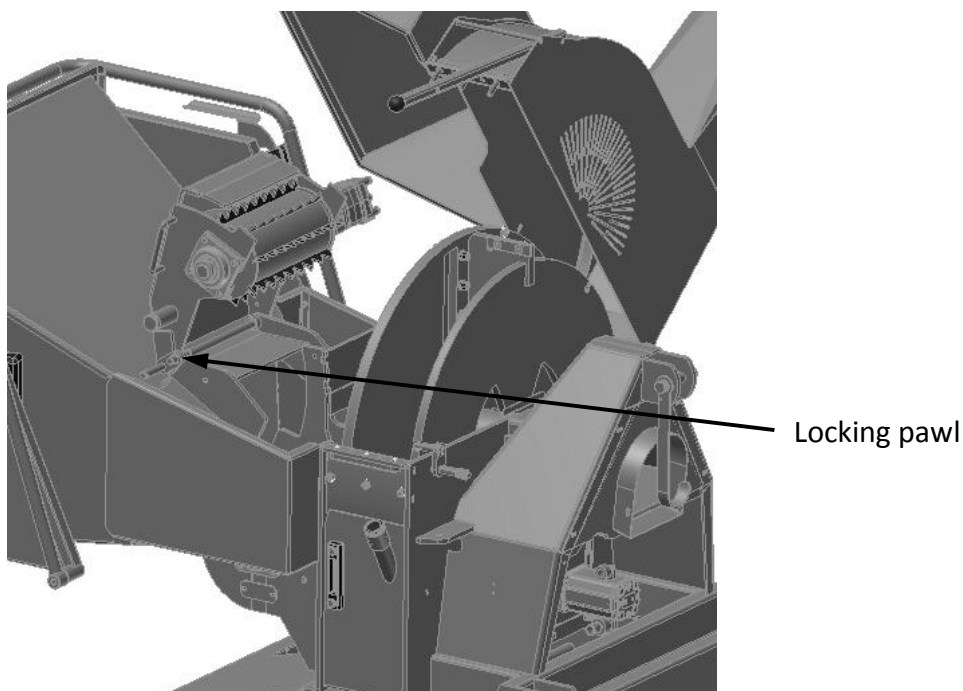

**Figure 13 Securing with locking pawl**

When the roller has been grounded, the top retract roller is lowered back in place. The spring is put back with multigrip pliers. Close the rotor housing and screw the bolts back.

## 8.4 Changing worn parts


### 8.4.1 Anvil

The anvil in the machine is used as wearing bar for the knife in order to cut the wood. The anvil must be sharp-edged otherwise the wood will bend down and the cut will become frayed. The machine is equipped with one horizontal anvil with two edges and two vertical anvil. The horizontal anvil can be turned.

*This is how it is done:*

Stop the machine and the drive. Uncouple the tractor's PTO. Check that the rotor is at a **complete** standstill. Turn the ejector tube so it faces the opposite direction of the rotor housing (fig. 6). Loosen the bolts which hold the two parts of the rotor housing together and open the rotor housing. With multitrip pliers the spring is lifted off the top retract roller and the roller housing is lifted and secured with the locking pawl (see fig. 13).

Dismantle the three bolts which hold the horizontal anvil. This is done from the outside and from below. The anvil is taken out and turned/replaced. Before the anvil is put back, the anvil and the bearing surface must be cleaned carefully. The distance between the knife's edge and the anvil must be **0,5-0,9 mm**. (See fig. 14). The tightening factor for the bolts for the horizontal anvil is **200 Nm / 20 Kpm**. (Accessory: in the tool kit there is a torque wrench).

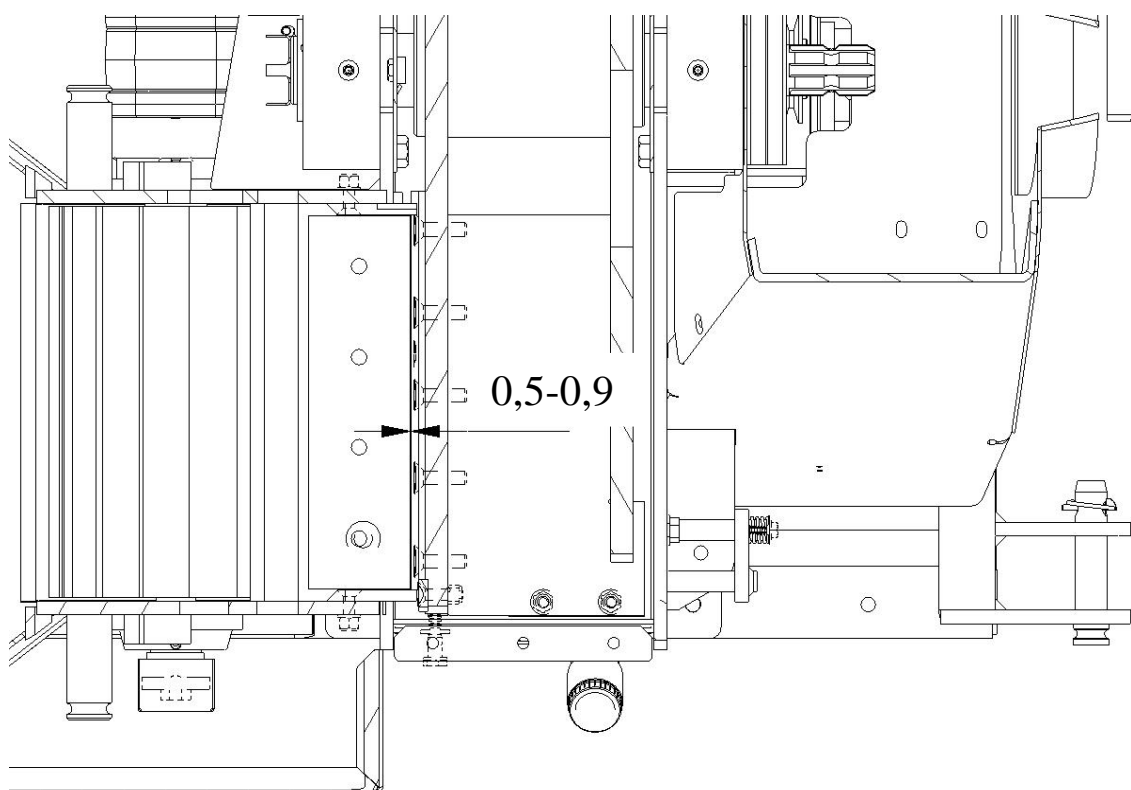


**Figure 14 Distance between anvil and knife**

The vertical anvil is unscrewed and removed from the inside. Before a new one is put in, the anvil and the bearing surface must be cleaned carefully. The anvil is set to a distance of **0,5-0,9 mm** to the knives. Use a new precision feeler gauge. The bolts for the vertical anvil are tightened to **50 Nm / 5 Kpm**.

When the anvils have been turned or replaced and all the bolts are tightened, the roller housing is lowered with the top retract roller in place. The spring is put back by using multigrip pliers (see fig. 13).

Turn the rotor a few times to make sure that there are not any objects in the rotor housing. Close the rotor housing and tighten the bolts (see fig. 15).

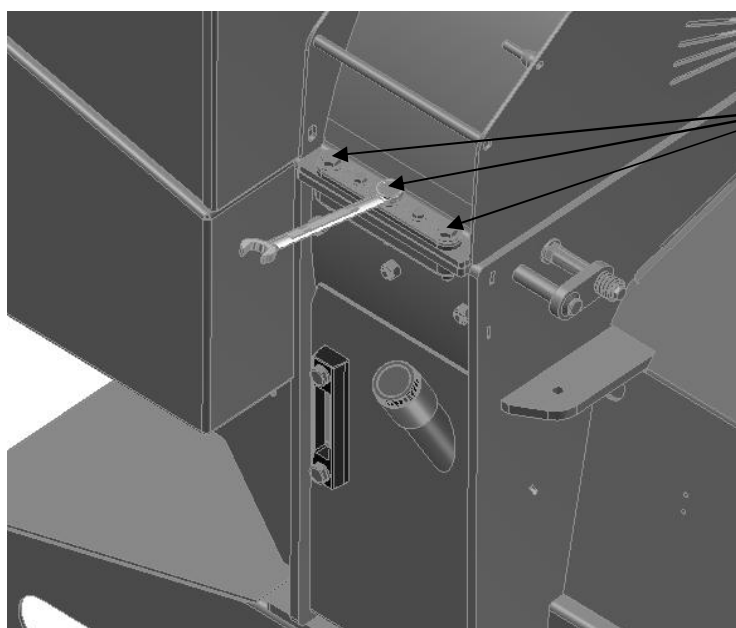

Bolts which hold the two parts of the rotor housing together

**Figure 15 Tighten of bolts in the rotor housing**

#### 8.4.2 Knives


The machine is equipped with three knives.

The knives must always be changed in sets. The knives belong together in sets, also when they are ground so that they are always of equal width. If the knives are not of equal width the rotor will be out of balance which will lead to unnecessary strain on the bearings and vibrations in the whole machine.

*This is how it is done:*

Stop the machine and the drive. Uncouple the tractor's PTO. Check that the rotor is at a **complete** standstill by looking at the two-coloured axle end. Turn the ejector tube so it faces away from the rotor housing (fig. 6) Loosen the bolts which hold the two parts of the rotor housing together and open the rotor housing.

The rotor is turned until the rotor lock can go into one of the holes on the rotor. Now the rotor is locked (see fig. 16). Be careful that your fingers are not near the knives when the rotor is turned.

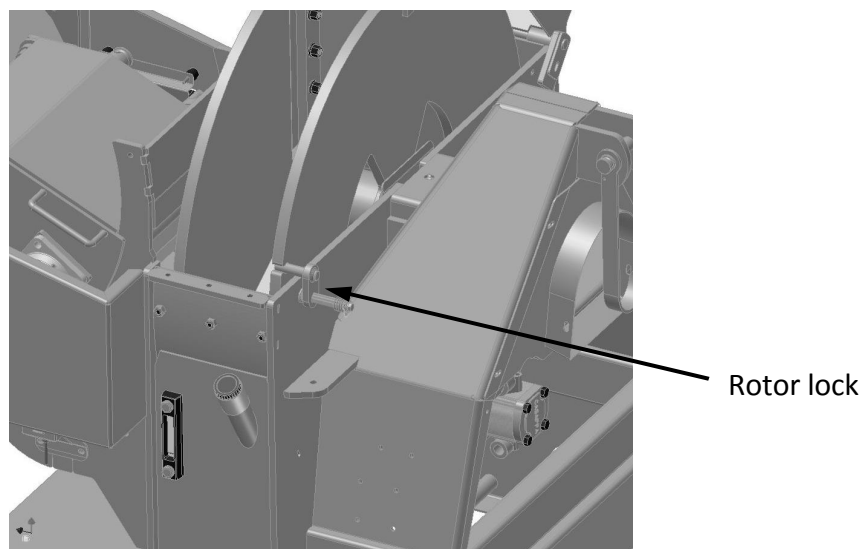

**Figure 16 Locking the rotor with rotor lock**

Remove the four nuts which hold the knife to the rotor. Take out the knife. The bearing surfaces on the chipping disc and the knife must be cleaned properly before fitting the knives. On fitting the nuts **must** be slightly greased ( $\mu=0,125$ ) meaning thin oil, WD 40 or something similar. Copper grease,  $\text{MoS}_2$  or similar low friction grease must **not** be used.


Check that the distance between the knife's edge and the anvil is set correctly at **0,7 mm**.

The nuts must be tightened with **95 Nm / 9,5 Kpm**. (Use a torque wrench for this which is included in the tool kit. This can be bought as an accessory).

When the knives are changed, the rotor is turned a few times to make sure that there are not any objects in the rotor housing. Close the rotor housing and tighten the bolts (see fig. 15).

### 8.4.3 Scrapers and facing plate

The machine is equipped with three square scrapers on the rotor disc, a triangle scraper in the rotor housing and a facing plate in the ejector tube (see fig. 17).

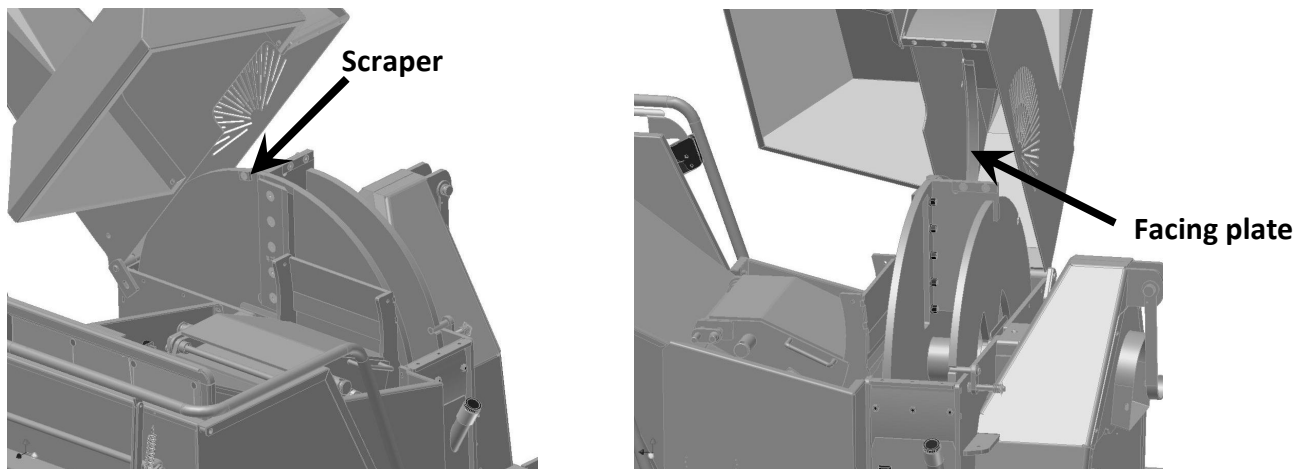

**Figure 17 Placement of the scrapers and the facing plate**

The purpose of the scrapers is to remove any material which might get stuck to the knives. At the same time the square scraper on the rotor removes material which falls off in front on the chipping disc.

This reduces the wear to the casing and reduces the consumption of fuel.

The square scrapers can be turned once before being changed, while the triangle scraper and the facing plate should always be changed when they are worn.

*This is how it is done:*

The rotor is turned until the rotor lock can go into one of the holes on the rotor. Now the rotor is locked (see fig. 16). Be careful that your fingers are not near the knives when the rotor is turned.

Dismantle the countersunk bolts which hold the square scraper on the rotor. Turn the square so that a sharp edge points up. Clean the block and the bearing surface. Put the square scraper back. If it is worn on two edges, the square scraper has to be changed. Always change the square scraper on the rotor in sets. Change the triangle scraper when it is worn.

The facing plate is mounted in the top part of the rotor housing and can easily be changed by dismantling three bolts on the outside of the rotor housing. If chip quality is not important the facing plate in the ejector tube can be removed. This will increase the capacity of the machine and save fuel. The facing plate has to be dismantled when chipping wet conifer with a lot of needles. Then a good ejection is ensured.

When the scrapers have been turned or changed, the rotor is turned a few times to make sure that there are not any objects in the rotor housing. Close the rotor housing and tighten the bolts (see fig. 15).

#### 8.4.4 Casing


The TP 250 is equipped with an interchangeable casing at the bottom of the rotor housing. The casing absorbs the wear and tear which would normally happen at the bottom of the rotor housing.

*This is how it is done:*

Stop the machine and the drive. Uncouple the tractor's PTO. Check that the rotor is at a **complete** standstill. Turn the ejector tube so it is pointing away from the rotor housing (see fig. 6) Loosen the bolts which hold the two parts of the rotor housing together and open the rotor housing. Remove the top part of the rotor housing.

Dismantle the six bolts and nuts which hold the casing to the bottom part of the rotor housing (see fig. 18).

Hit with a hammer on the part of the casing which sticks up over the edge of the rotor housing at the hinge side to loosen the casing. Now the casing can be swung out.

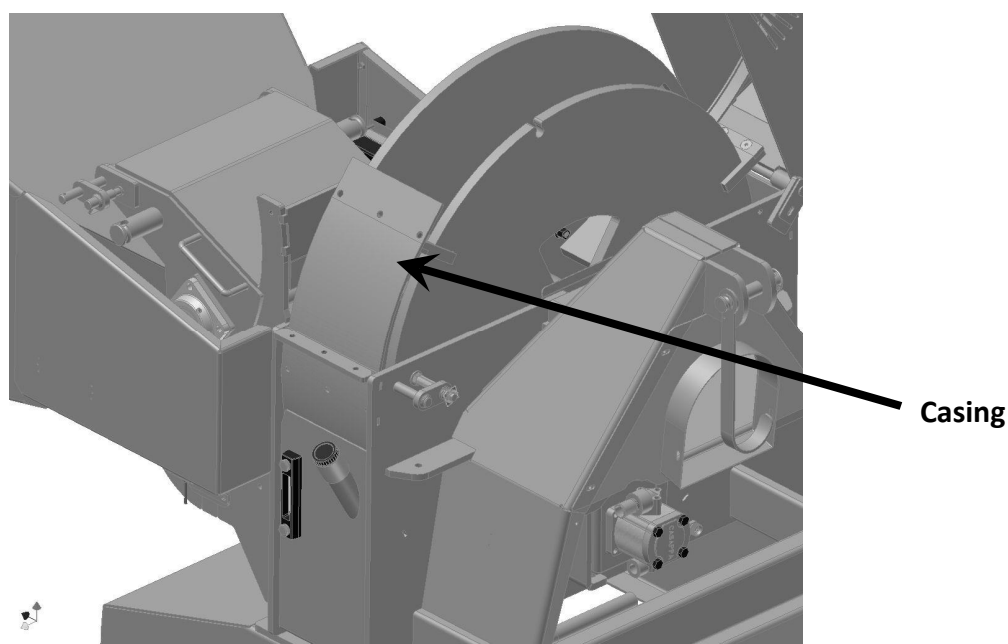

**Figure 18 Changing the casing**

Before a new casing is put in, you must clean the bottom of the wood chipper. Mount the new casing with six bolts. Put the top part of the rotor housing back.

When the casing has been changed the rotor is turned a few times to make sure that there are not any objects in the rotor housing. Close the rotor housing and tighten the bolts (see fig. 15).

#### 8.4.5 Adjusting the V-belts


##### Pump transmission

The retract rollers are run hydraulically. The hydraulic pump to the retract rollers is run by V-belts. The V-belts need to be checked regularly or when the belts are suspected to be slack.

*This is how it is done:*

Stop the machine and the drive. Uncouple the tractor's PTO. Check that the rotor is at a **complete** standstill. Turn the ejector tube so it faces away from the rotor housing (fig. 6). Loosen the bolts which hold the two parts of the rotor housing together and open the rotor housing.

Loosen the four screws which hold the hydraulic pump in place and adjust the tension by turning the adjusting screw. Used belts are allowed to bend 5.87 mm when they are pushed down with 50-54 N (5-5,4 kg), for new belts this number is 57-61 N (5,7-6,1 kg) (See fig. 19). The belts can be measured with a gauge for this purpose which can be bought as an accessory.

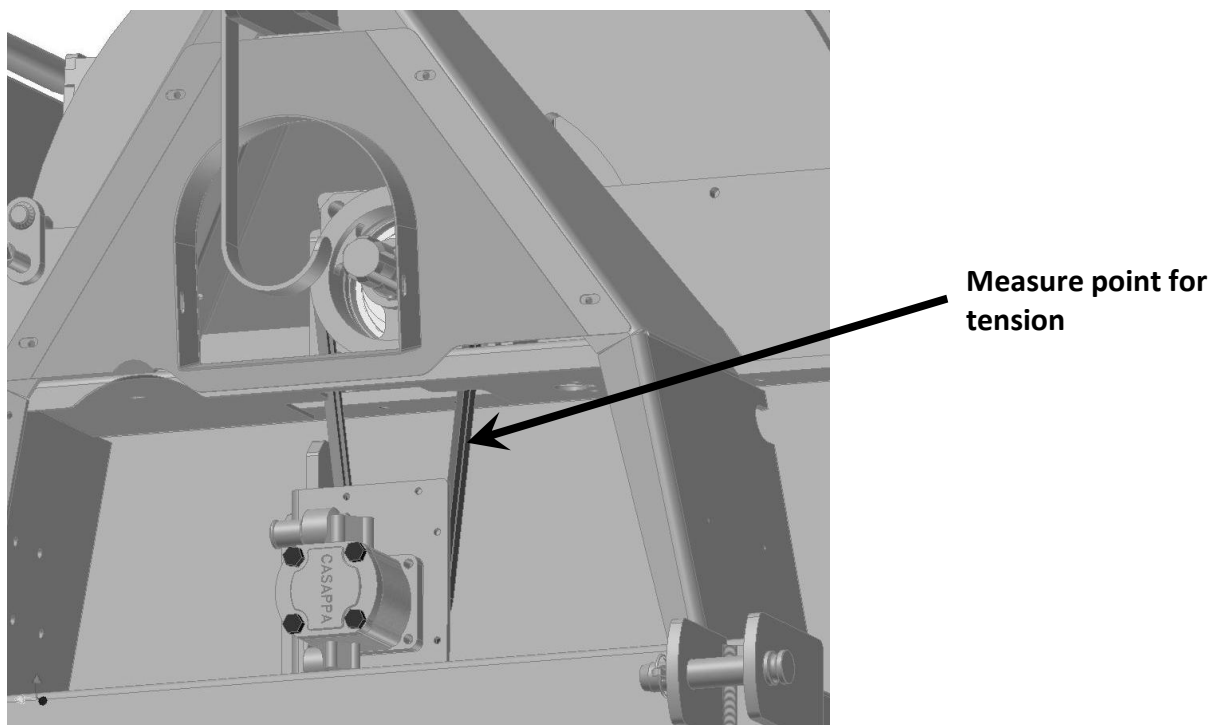

**Figure 19 Adjusting the tension**


When the V-belts have been tightened, the rotor is turned a few times to make sure that there are no objects in the rotor housing. Now the rotor housing has to be closed and the bolts have to be tightened (see fig. 15).



## 8.5 Grinding of knives

It is very important for the quality of chips that the knives are sharp. They have to be checked at least once a day. The grinding interval of the knives can be prolonged by grinding them with a carborundum stone regularly.


The grinding can be done as wet grinding with a bond stone (see fig. 20). **Never** use an angle grinder or a similar tool for grinding the knives.

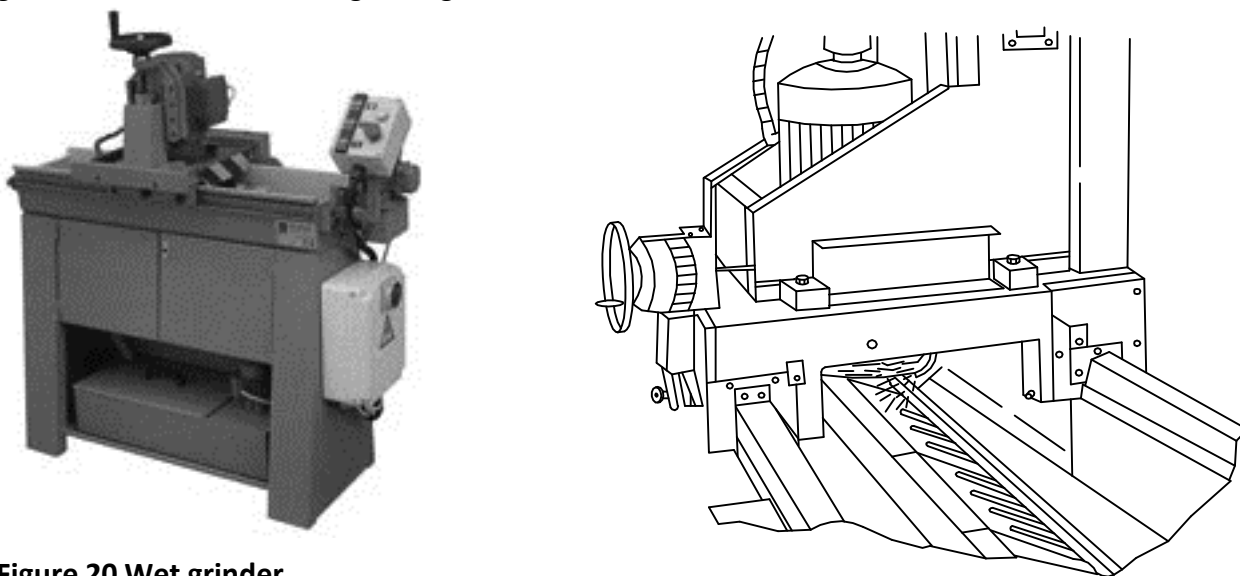

**Figure 20 Wet grinder**

When grinding knives you have to pay attention to the width of the knife set. The width has to be the same because of the balancing of the rotor. Therefore, the knives always have to be ground in sets. The knives must have a measurement of min. 90 mm (See fig. 21). After that they must be thrown away.

The edge of the knives must be ground at an angle of  $28^\circ$ . (See fig. 21).

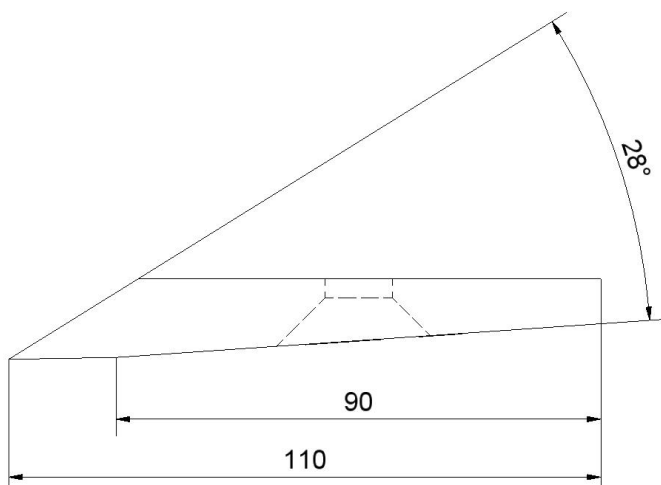


**Figure 21 Grinding angle and minimum knife width for chipping knives**

## 9 Special instruction for TP 250 MOBILE TURNTABLE

The TP 250 MOBILE TURNTABLE is a trailer mounted wood chipper comprised of a trailer upon which a wood chipper with own engine is mounted. The trailer can be coupled to a vehicle with a ball and socket head as a coupling without inspection.

As accessory, the ball and socket head can be replaced by a pintle eye.

The height of coupling can be adjusted from 402 mm to 922 mm.

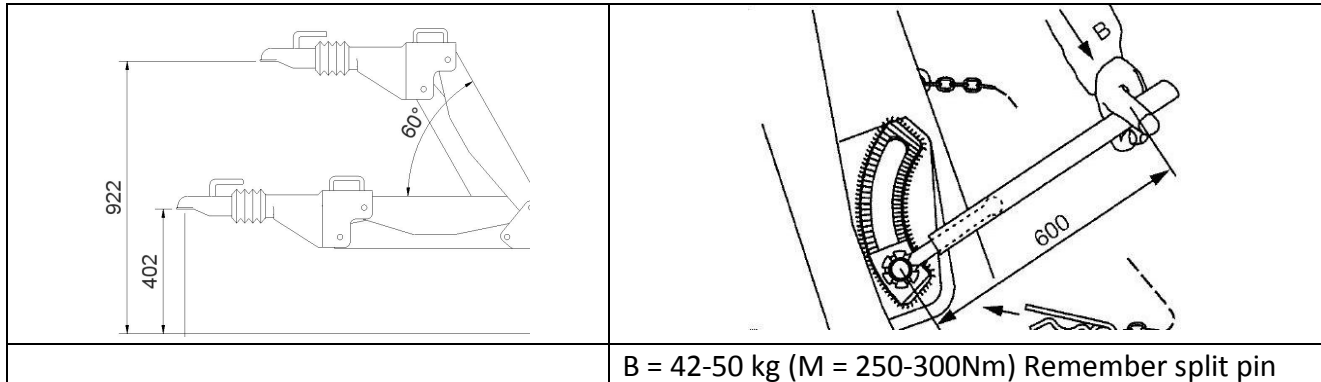

After adjusting the height, the position must be secured by tightening the screw connection with the above factor. Remember to lock the screw connection with a split pin!


### Transport on public roads

When driving on public roads, the ejector tube must be turned backwards and secured against rotation.

During transport the locking mechanism on the turntable must be secured against rotation and secured with a ring split pin.

Pos A = Transport

Pos B = Work position

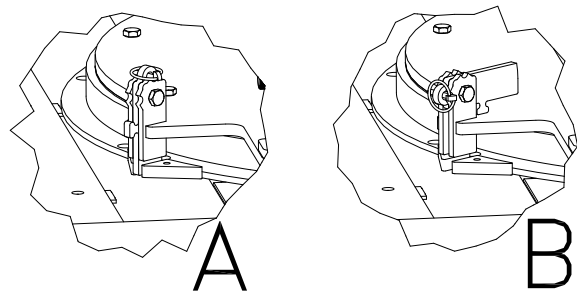

The retractable hopper must also be tipped up and secured with a ring split pin.

When coupling, the 7/13 pole connector and the safety chain must be coupled to the vehicle.

The supporting leg must be raised.

The hand brake is released before driving.

Check the lights and the brakes before driving.

Measurements of the trailer: Width 2200 mm. Length 4200 mm. Height 3200mm

Tire assembly: 165R13C/8

Tire pressure (cold), max.: 450 kPa = 65 psi. = 4,5 bar

**In order to avoid destroying the electrical system, the following points must be respected:**

1. The ignition key must never be in neutral during operation.
2. The earth connections must be clean.
3. When using a battery charger, the earth cable on the battery must be dismantled.

**Instruction for wood chipper: See TP 250 PTO**


**Service and guidance for engine: See the enclosed service manual or [www.hatz.com](http://www.hatz.com)**  
**Engagement of the wood chipper.**

**At cold starts:** Start the engine. Set the throttle so the engine runs smoothly at low revolutions. Let the engine run 30-60 seconds depending on the temperature. Then the wood chipper is engaged slowly and the rpm are increased to working speed "full throttle".

**At warm starts:** Same approach is followed. Only it is not necessary to let the engine heat up before engaging.

**The wood chipper must not be engaged at full throttle.**

**When stopping:** Let the wood chipper run out of material. Disengage the wood chipper. Let the engine run idle for approximately 30 seconds before the throttle is turned to stop. Turn the ignition key to neutral. (See symbols on the starter box).

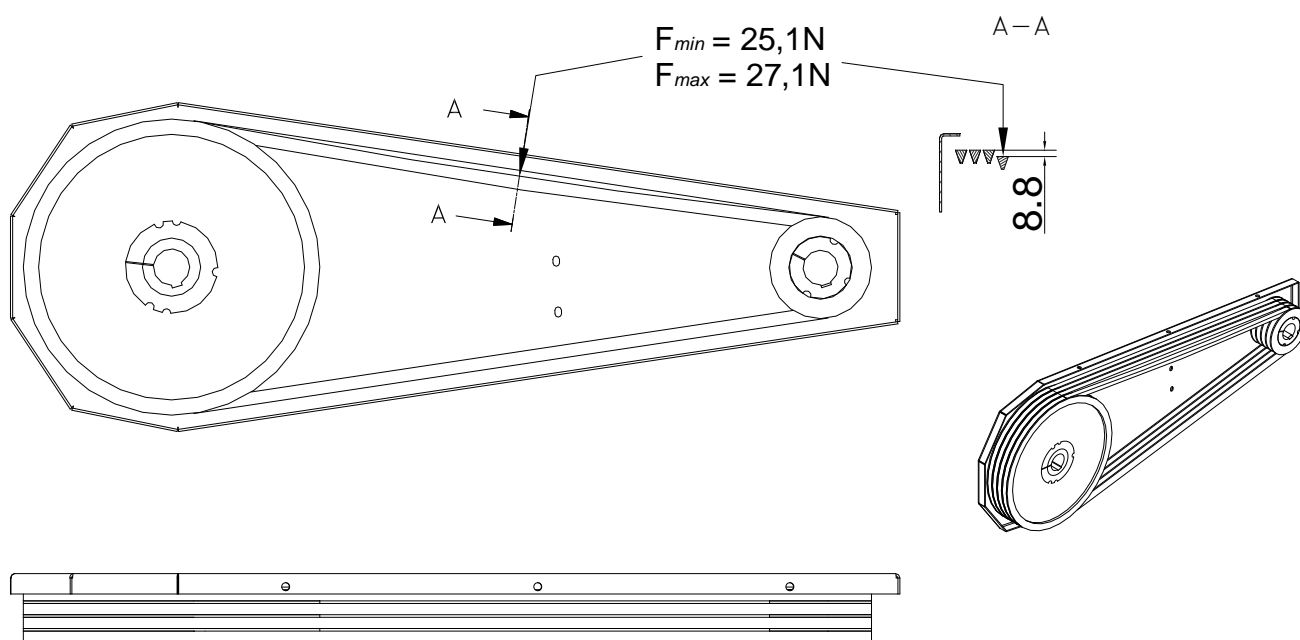

**Check of V-belts and wood chipper:**

Stop the engine and make sure the rotor is stopped. Dismantle the outer screen over the V-belts.

If the belts need tightening:


Loosen the bolts which hold the wood chipper to the engine console. The tightening bolt is tightened so the wood chipper is pushed to the side.

Check that the two belt discs are parallel and are aligned.

Then tighten the bolt and the counter nut. (Check the belt tension again).

Finish by mounting the screen.


### Maintenance of the tow bar.

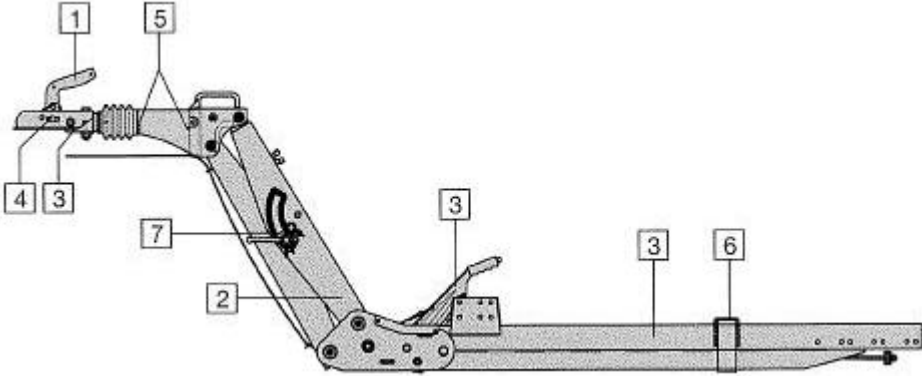							
	Maintenance schedule BPW-Special Long range grease ECO-Li 91	Before use	After the first drive	After all adjustments	Approximately 50 km after adjustment of tow bar	After approximately 500 km	For every 2-3000 km At least once a year
1	Test the overrunning brake and ball and socket coupling.	x					x
2	Test the adjustment of the tow bar.	x				x	x
3	Test the hand brake.	x				x	x
4	Lubrication of ball and socket coupling.	x					x
5	Lubrication of the overrunning brake.						x
6	Tightening of the fastening bow.		x				
7	Tightening of the castle nut.	x		x	x		


Lubrication of 3 nipples on the turntable for every 50 hours.

Service and guidance for engine: See the enclosed service manual.

## 10 Hydraulics diagram, TP 250 without revolution guard

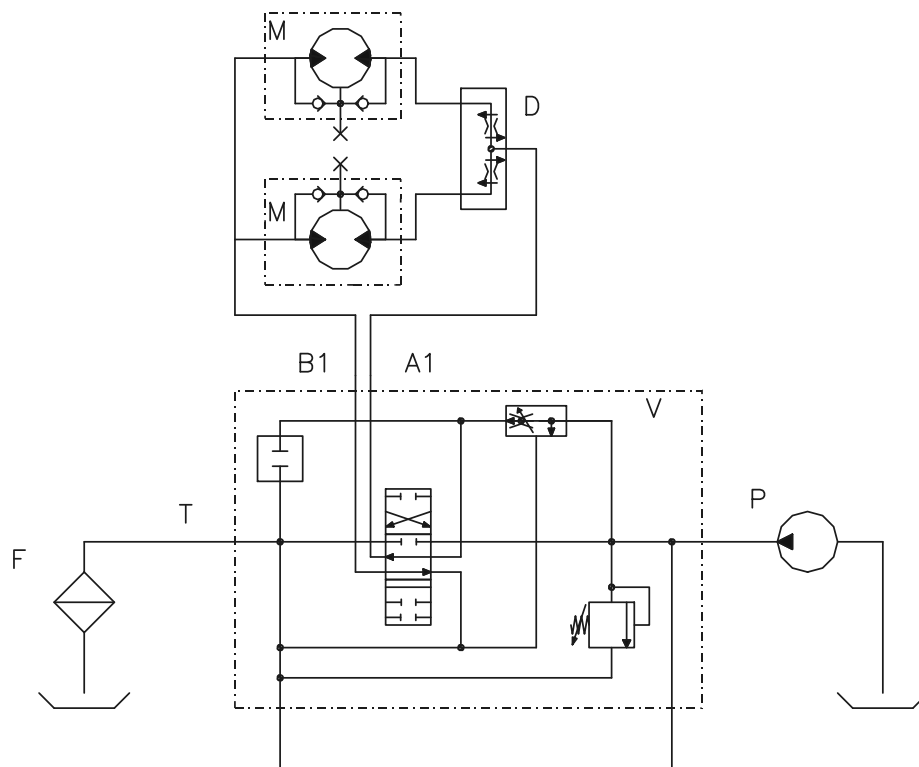

## 11 Hydraulics diagram TP 250 with revolution guard

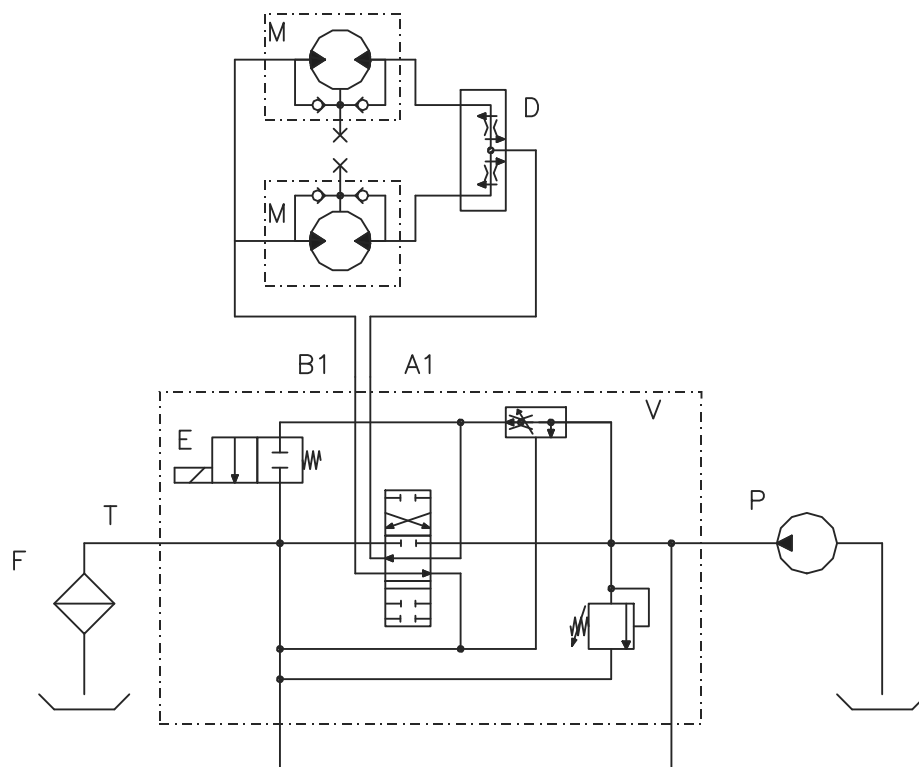

## 12 Instruction for revolution guard TP PILOT 01

### 12.1 Overall operation

The TP Pilot gives you the opportunity to monitor the revolutions of the engine and retract rollers and sounds an alarm when low or high limit values are exceeded.

Parameters and machine type can be change by entering an access code.

Valid from version 816.14. See setting table for machine types.

### Different functions and display indications


The following functions are included in the computer:

Symbol:	Denomination:	Limit value:	Access code needed
	Programmable revolution guard <b>Rotor</b> (used with sensor for rotor rpm)	1 – 9999 rpm (in practice not under 12 rpm)	X
	Programmable revolution guard <b>Roller</b> (used with sensor for roller rpm)	1 – 9999 rpm (in practice not under 12 rpm)	X
	Work time	0:0 – 99:59 hours: minutes 9999 whole hours	
	Work time total	0:0 – 99:59 hours: minutes 9999 whole hours	
<b>Type</b>	Choice of machine type	1 – 12	X

### Overview of the monitor

#### Marker

- Display marker (vertical or horizontal) at the sides of the display indicates which function is shown at the moment

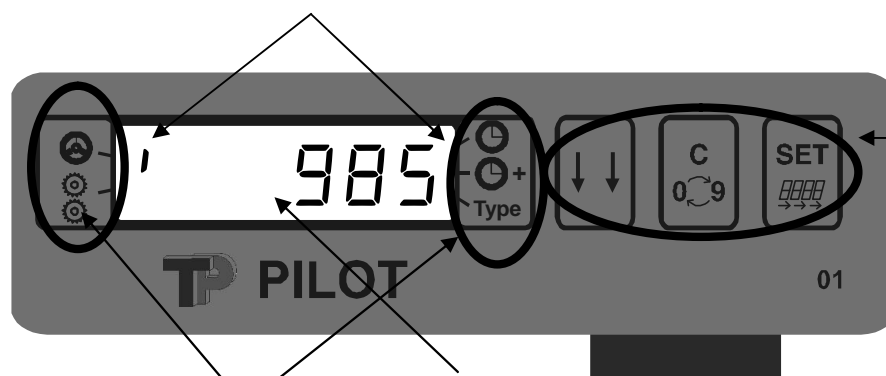

#### Display indications

- Shows the possible functions (values) which can be shown in the display

#### Display

#### Connector

- Input for enclosed sensors and outputs

#### Operation keys


- Change between display indications
- Starting changes to the marked value
- Programming new number values and reset

## Explanation for operation keys



-Key




By pressing the  key you switch between the different display indications (seen in the window at the left end of the display) and thereby the different functions of the monitor. With each press on the key, the position of the marker/display indication changes one step. The marker starts in the top left corner and then moves "down".

The key is also used to leave the change menu (cf. next paragraph).



-Key





The  key is used for programming (changing/deleting) values in the computer, e.g. putting in alarm values for high and low revolutions.



-Key



With the  key the values that are going to be programmed (chosen by using the  key) are changed or deleted.



The computer is equipped with an internal memory which saves all values when the power is cut.

## 12.2 Programming

The following parameters can be adjusted as desired.

Parameter	Meaning	Comment
<b>L</b> (ow)	Lowest rpm	Deviation from normal revolutions. If the machine is loaded to under "lowest rpm", the feeding is uncoupled so that the machine has the possibility to get to normal rpm where the rollers start.
<b>h</b> (igh)	Normal rpm	Normal revolutions that the rotor disc has to hold and where the feeding starts.
<b>T</b> (ype)	Machine type	According to the setting table for machine types.


An alarm is sounded on the retract roller. If the rpm on the retract roller goes over the upper limit value (Roller blink) the display will blink between current RPM and 'High'.

Adjust the roller speed by turning the manual regulation of the oil quantity for the oil engines.


When the roller speed goes under the limit value again the current rpm is shown again.


### Entering the access code

When changing the parameters and machine type, access code **1001** is required. Enter the access code with following procedure

With the  key you can navigate to the function/indication you want to change/programmed.

Then the  key is held for approximately 1 second until \_c0000 start flashing.

With the  key the first digit in the value you want to program is now changed or deleted.



















By pressing the  key, the marker moves to the next digit in the value and so on until all the

digits are changed/programmed. The programming menu is left by pressing the  key.

The access code is required at every change.



Here you see an example for programming of limit values on the rotor.

Example of changing low limit value to 850 rpm and high limit value to 1025 rpm		
Push key:	The display shows:	Explanation:
	0	Find the revolution guard for the rotor by pressing the key repeatedly.
	L X800	Press the key for 1 second, <b>enter access code</b> "L" lights up to the left and the first digit (of 4) is flashing.
	L _800	Press the key until the digit has the correct value. Notice that zero appears as _ here.
	L _X00	Press to put/change the next digit (the second digit will flash).
	L _800	Press the key until the desired digit is correct.
	L _8X0	Press to put/change the next digit (the third digit will flash).
	L _850	Press the key until the desired digit is correct.
	L _85X	Press to put/change the last digit.
	L _850	Press the key until the desired digit is correct.
	h X000	Press the "arrow" key and "h" (high) will light up to the left and the first digit (of 4) will flash.
	h 1000	Press the key until the desired digit is correct.
	h 1X00	Press to put/change the next digit (the second digit will flash).
	h 1000	Press the key until the desired digit is correct.
	h 10X0	Press to put/change the next digit (the third digit will flash).
	h 1020	Press the key until the desired digit is correct.
	h 102X	Press to put/change the last digit.
	h 1025	Press the key until the desired digit is correct.
		Press to complete and exit the programming menu.

When an alarm limit on the rotor is exceeded, the current rpm is still shown while the retract rollers are stopped. If the rotor has been under the lower limit value, the retract rollers will start when the rotor's rpm is over the set upper limit value 'h' (ex. 1000 rpm).

### Setting table for included machine types.

Model	PTO/rotor Rpm	Rpm 1 L	Rpm 1 h	Type Nr.
TP 250 PTO	540	400	540	2
TP 250 PTO	1000	850	1000	5
TP 250 MOBILE	927	750	900	8

### Table for the roller's rpm based on position of the knives.


Position Model	Rotor Rpm	4 mm	6 mm	8 mm	10 mm	13 mm
TP 250 PTO	540	9	14	19	24	31
TP 250 PTO	1000	17	26	35	44	56
TP 250 MOBILE	900	16	24	31	39	51

From the above table the roller's rpm can be seen for the current position of the knives. The rpm is set by means of the regulation screw on the control valve.

### Work time on the machine:

#### Indication of rotation time on the machine.

In this display indication, the middle horizontal marker is activated on the right side. The complete rotation time will be shown as illustrated in the following figure.

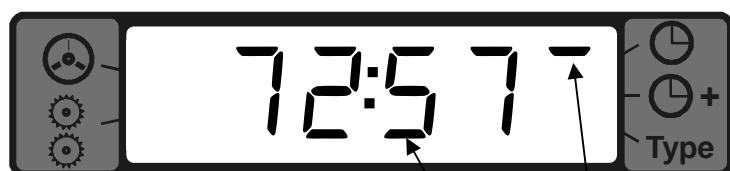





Operation time in  
hours and minutes

Display marker for  
work time

- Over 99:59 hours/minutes will be shown as whole hours.

### Resetting the rotation time on the machine.

Resetting the rotation time (operation time) on the machine can be done at any time. First you push the  key until the display for work time appears. After this, the following is typed in:


Push the key:	The display shows:	Explanation:
	72:57 (example)	Find job hours by pushing the key repeatedly.
	72:57	Hold the key in for five seconds until the number blinks.
	00:00	Push the key to reset the rotation time.

Notice: The total hour counter (bottom vertical marker) cannot be reset. It is used for registering the machine's total work time.

## 12.3 Mounting

### Mechanical setup and mounting diagram

Mounting diagram when using electronic sensors (hall or inductive sensors):

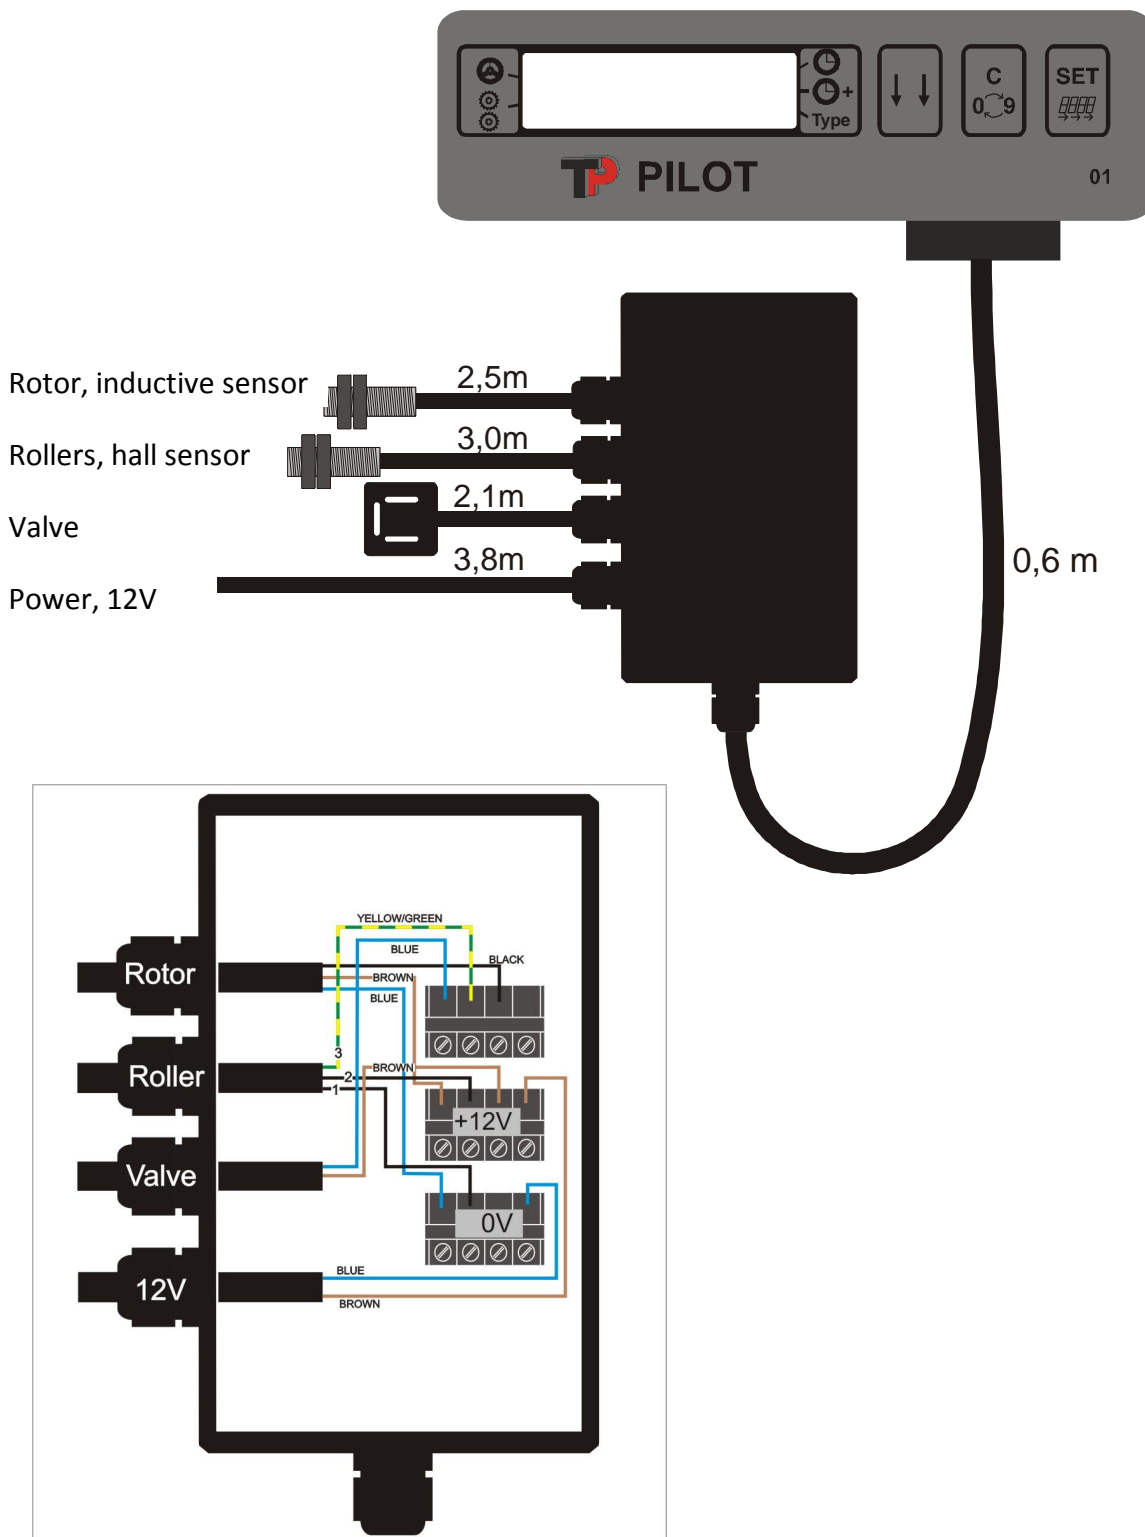

## 12.4 Technical data

Display:	6 digits.
Power supply:	12 Vdc / 1,24 A
Temperature influence:	The TP Pilot is completely operational within -10 / +70 °C.
Pulsations from sensor:	Max. 225 pulsations/sec.

### Notice:

The control/monitor has been designed for use in connection with the functions described. Any other use of the control/monitor as it is risky and exempts the distributor of the control from any type of responsibility.

### 13 Troubleshooting for wood chipper TP 250

Check possible causes before contacting the distributor.

<b>Problem / Possible cause</b>	<b>Solution</b>
<b>The rollers are not spinning satisfactorily:</b>  <i>Not enough oil in the hydraulics system</i> <i>The flow valve is screwed out too far</i> <i>The stationary roller is blocked</i> <i>The bypass valve is dirty</i> <i>The revolution guard is blocking</i> <i>The operation bow is in the 0 position</i>	Fill up with hydraulic oil Turn up the flow Clean under and behind the roller Clean the bypass valve Increase the rpm on the rotor Put the operation bow in the A position
<b>The rollers are not pulling satisfactorily:</b>  <i>Not enough flow</i> <i>The V-belts are too slack</i> <i>The hydraulic oil gets too hot</i> <i>Too poor viscosity of the hydraulic oil</i> <i>The hydraulic filter is clogged</i> <i>The oil pump is worn or damaged</i> <i>The oil engine is defective</i> <i>The pressure control valve in the control valve is dirty</i>	The flow valve is turned (opened) Tighten the V-belts Let the machine cool down while checking why Change the hydraulic oil Change the hydraulic filter Change the hydraulic pump Change the oil engine Clean the pressure control valve
<b>Chip quality is not satisfactory:</b>  <i>The knives are dull</i> <i>The anvil is worn</i> <i>The knives are worn too far down</i> <i>The distance between knife and anvil is too big</i> <i>Sliver breaker not mounted or worn</i>	Grind the knives Turn/change the anvil Change the knives Adjust the distance between the knives and anvil Mount or change the sliver breaker
<b>Poor ejection of the chips:</b>  <i>Not enough drive</i> <i>Scrapers are worn</i> <i>Ejector wings are worn</i> <i>The facing plate in the top part</i> <i>Not enough revolutions on the machine</i>	Not enough effect on the PTO axle or the engine Change the scrapers Change the ejector wings Remove the facing plate in the top part Increase speed to maximum revolutions

## 14 Warranty obligation for wood chipper

The warranty is valid 12 months from date of purchase to rectify defects that irrevocably are due to defects in materials or workmanship. The warranty covers faulty components which are repaired or replaced.

Transportation costs and wages for changes are the responsibility of the customer.

Upon any claims, the changed parts must be sent to Linddana for investigation.

Linddana alone decides whether the claim can be approved.

The following is an excerpt from Linddana's Terms of Sales and Delivery (item 4 and 5).

### Claims

Any and all risk concerning the goods is passed to the buyer at the time of delivery of the goods. A claim concerning the goods has to be done in writing to Linddana as quickly as possible, and no later than 8 days after delivery. If Linddana has not received the claim before the deadline stated, the objections to quantity and quality that the buyer might have will lapse.

Linddana is entitled and obligated to correct any and all faults which are caused by the construction, material or manufacture. Linddana alone determines whether the remedy is to be done with repairs or changes of the defective parts. In case of repairs, the buyer is obligated to deliver and collect the goods sold in the workshop determined by Linddana at no expense to Linddana. In case of changing the defective parts, the buyer is obligated to send in the defective parts to Linddana at no expense to Linddana. Linddana is entitled to changing the defective goods.

Linddana's responsibility only covers faults which occur within a year of the goods sold being delivered.

Linddana has no liability besides those stated in the present item. This includes any loss the fault might cause including loss of work, loss of earnings and other economical implication losses.

### Warranty conditions

If Linddana has decided to grant a warranty, then this has faults in the construction, material or manufacture. A warranty granted by Linddana does not cover faults which occur as a result of imperfect maintenance, incorrect mounting, changes made by the buyer or wrong use of the good. The warranty furthermore does not cover normal wear and tear or deterioration. Linddana's warranty obligation presupposes that the buyer documents that a stated fault is not due to the conditions which are exempt from the warranty cf. afore-mentioned.

The buyer must let Linddana know in writing about any faults to the goods sold no later than 8 days after the fault should have been realized by the buyer. If the buyer does not let Linddana

know before the expiration of this deadline and before the warranty period runs out, the buyer loses the right to make any claims concerning the fault.

Linddana is entitled and obligated to remedy any faults which are covered by a guarantee granted by Linddana. Linddana alone decides if the remedy is to be done as repairs or changes of the defective parts, everything under the terms stipulated in item 4.

Linddana has no other liability for those faults. This includes any loss the fault might cause including loss of work, loss of earnings and other economical implication losses.

**The guarantee does not cover:**

- If a defect with just cause can be attributed to inappropriate use.
- Use of unoriginal spare parts, including worn parts.
- Wrong adjustment or use of the machine.
- Use of wrong lubricant or hydraulic oil.
- Wear on cross at PTO axle.
- Tightening spring for rollers.
- V-belts.
- Knives and anvil which break because of foreign bodies in the machine.



## 15 Technical data wood chipper

Type	TP 250 PTO	TP 250 MOBILE TURNTABLE
Chipping principle	Disc chipper	Disc chipper
Rotor disc diameter, mm	960	960
Number of revolutions PTO rpm*	540-1000	930
Knives, pieces	3	3
Effect need min/max kW/(HP)	45-104/(60-140)	47/(64)
Max. Wood diameter, mm	250	250
Chip length, mm	13	13
Weight, kg	1065	2200
Height, mm	2940	3200
Width, mm	1550	2200
Length, mm	2020	4200

PTO transmission axle: Walterscheid type 2400 with free running and friction coupling.

Rights to changes in the construction and specifications without previous notice reserved.


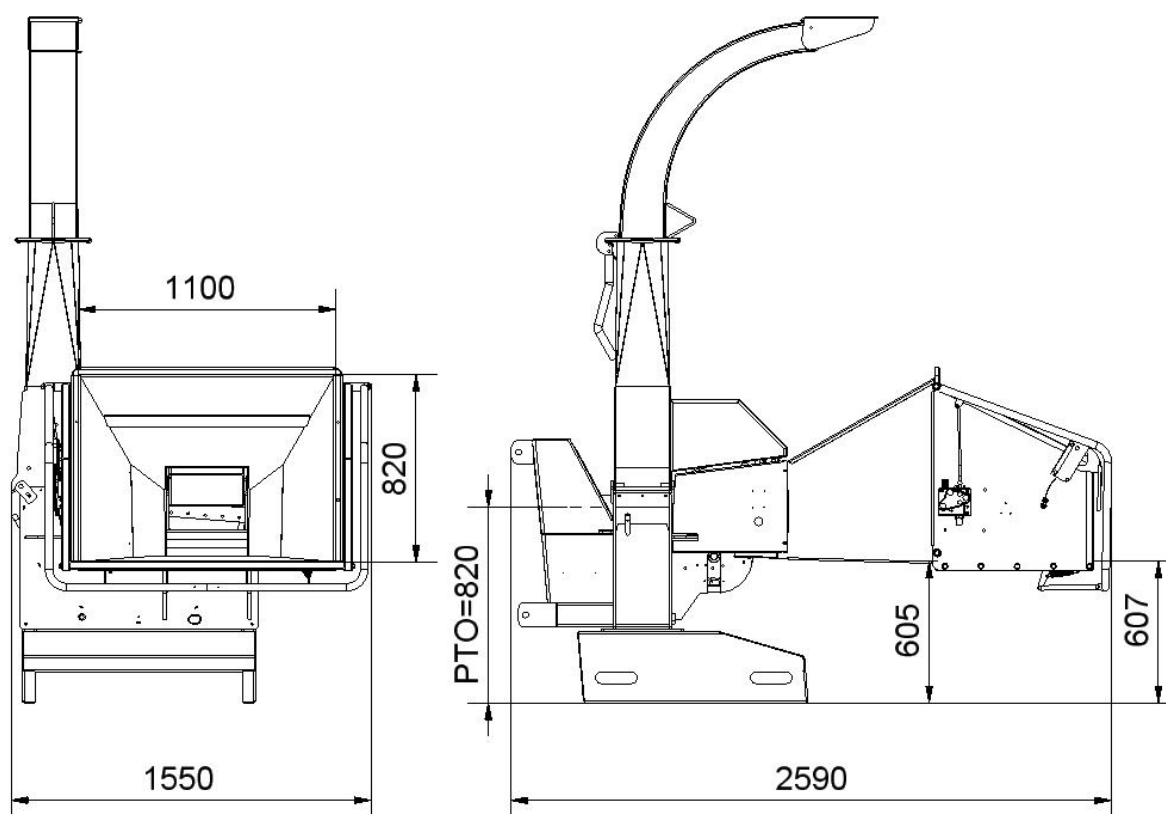


Figure 22 Dimensional sketch TP 250 PTO

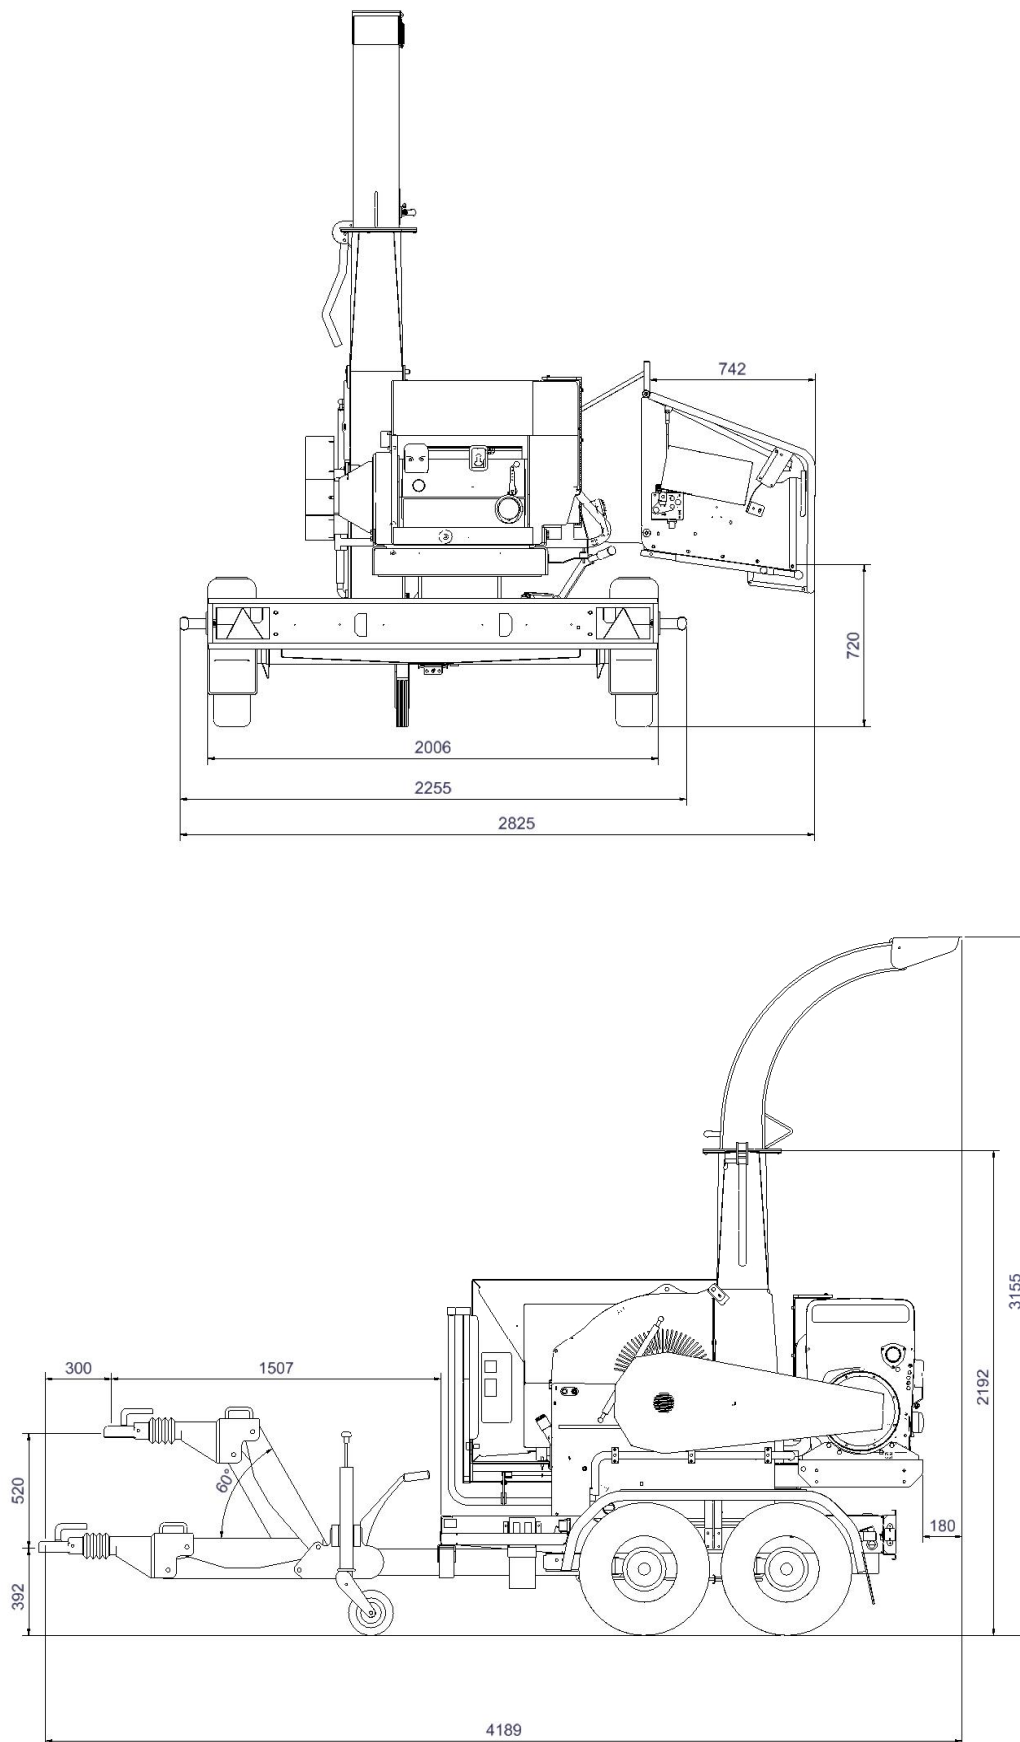

**Figure 23 Dimensional sketch TP 250 MOBILE TURNABLE**

## 16 Accessories

- Tool kit incl. torque wrench.
- Prolonged ejector tube horizontal.
- Extension for ejector tube vertical.
- Lock for ball and socket coupling (TP 250 MOBILE TURNTABLE).
- Light boom (TP 250 PTO).

## 17 Spare parts catalogue